

Normal XRD (NXRD)

CONTACT

UNIST Central Research Facilities

1st Engineering Building Room B101-2

Tel. +82 52 217 4023 Web. http://ucrf.unist.ac.kr



Machine Information





Model : D8 ADVANCE (Bruker)

Introduction year: 2011

Asset number:

Address : Bldg.102 B101-2room



You can check machine condition through 'Status Light' located at bottom of both sides.

1) Normal operation: Ready & On

2) During Measurement: Ready & On & Busy

3) Equipment error: On & Alarm





Sampling



<Thin film Sample>

- 1) Cut rubber clay with scissors as size of sample.
 - When rubber clay is smaller than sample, thin film can be leaned.
- 2) Do not mass rubber clay, and stacks in the middle of the holder.
 - When you transform rubber clay, thin film can be leaned because of each different density and thickness of clay.
- 3) Put a thin film on rubber clay, and then press down with slide glass slowly.
 - X Before that, wash the slide glass clearly.
- 4) Do not reuse rubber clay because it has getting lower stickiness as you use.

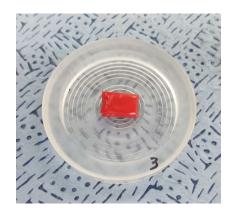

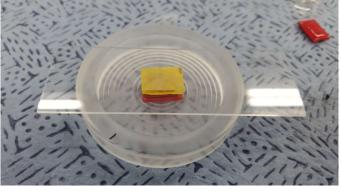





Door Open & Sample Loading

*

> How to open NXRD door:

1) After push the button 'Door open' located at bottoms of both sides, check the Alarm blinking.

X Only open Left door!

- 2)Fix left index finger to Pb glass, and then pull open the door with the rest 3 fingers.
 - At that time, it is important to maintain this situation that index finger has power.
- 3) Insert holder straightly to avoid leaning on the Auto Sampler.
 - In case of non-square thin film, Place it so that it looks similar.



> How to close NXRD door:


- 1) push the glass door all the way.
- 2) Push the handle to the inside, check a clicking sound.
- 3) Check 'Alarm' Light off.






NXRD PC Access: True Cafe



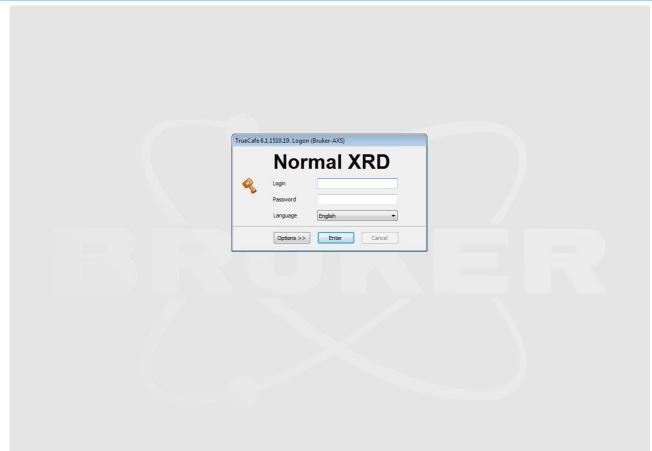


- Enter individual ID & Password in True Café.
 (One ID per person!)
- 2. Do not share individual ID & Password.
 - sharing has penalty or stop using for 90 days!
- 3. In case of machine manager,
- request writing ID produce manual.
- request writing corresponding manual when having problem.



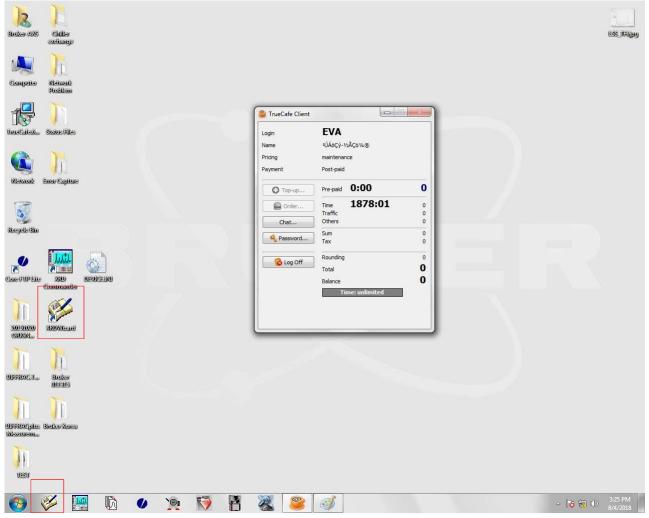

XRD WIZARD is program producing measurement condition file.

Double click one of both.

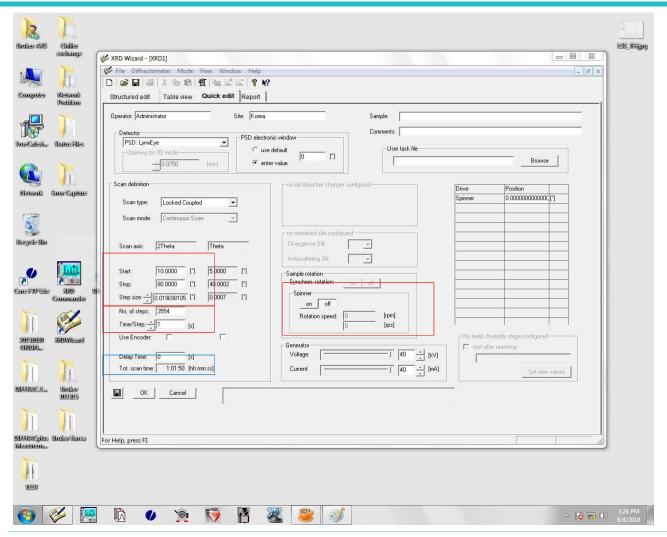

In WIZARD, you fill in below items.




- -Start, Stop,
- -Step size,
- -No. of steps,
- -Time/Step,
- -Spinner

After inserting condition value you want,
Check Total Scan Time.

'Start' is measurement start degree,
Stop is measurement complete degree,
Step size is step of measurement degree,
Time/Step is each measurement time of step,
Spinner means whenever of not to rotate and
rotation velocity.






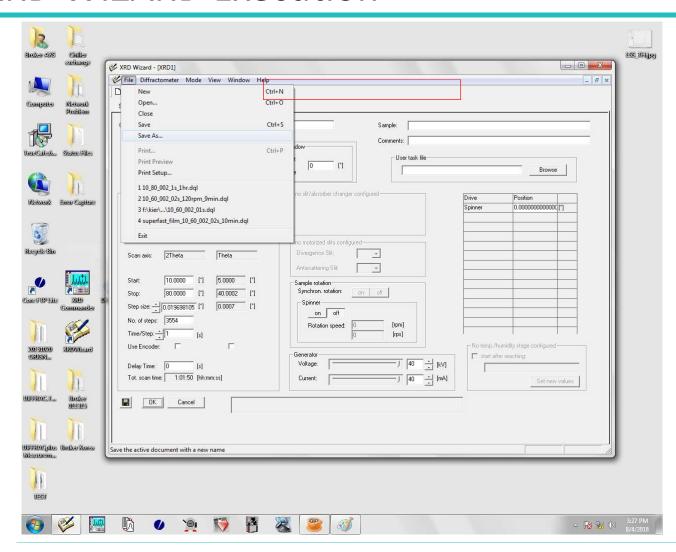

Click 'Save As' in 'File'.






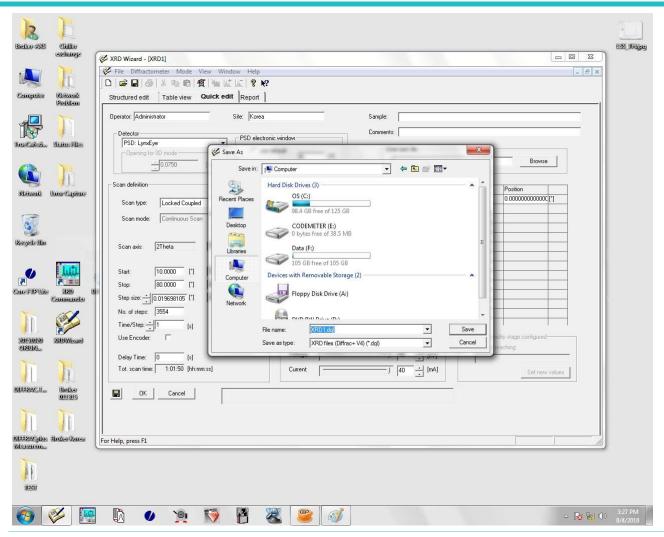

Save measurement condition file produced in 'fileWIZARD' as DQL file.





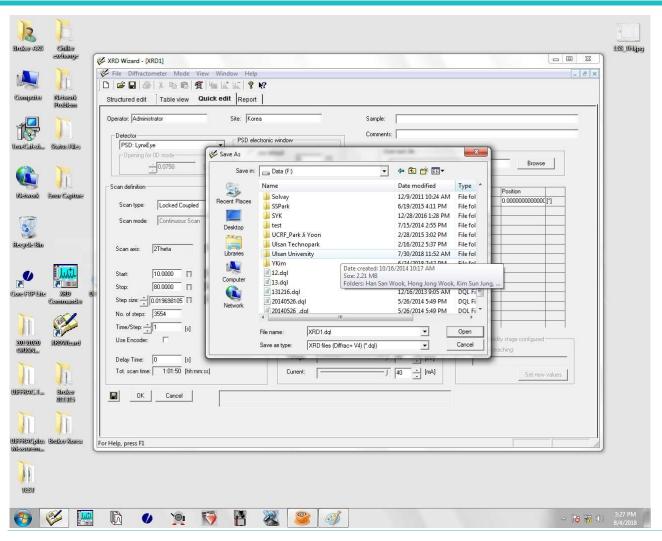


Save location is,

Computer

- > F Drive
- > Lab name folder
- > Requester name folder
- > Measurement date folder



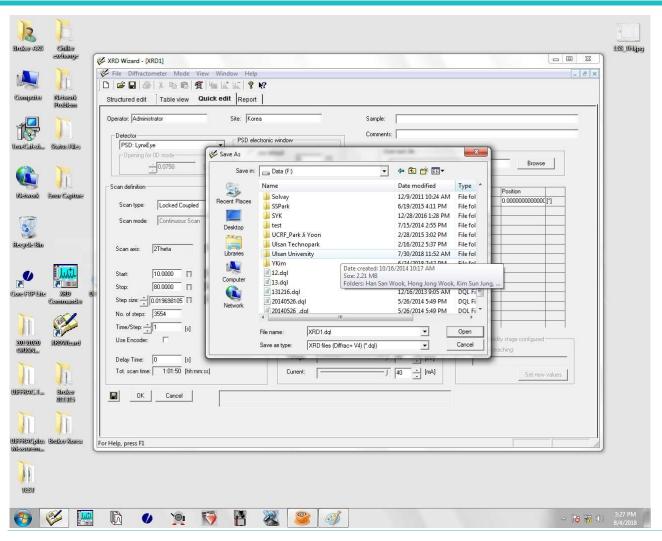


Save location is,

Computer

- > F Drive
- > Lab name folder
- > Requester name folder
- > Measurement date folder



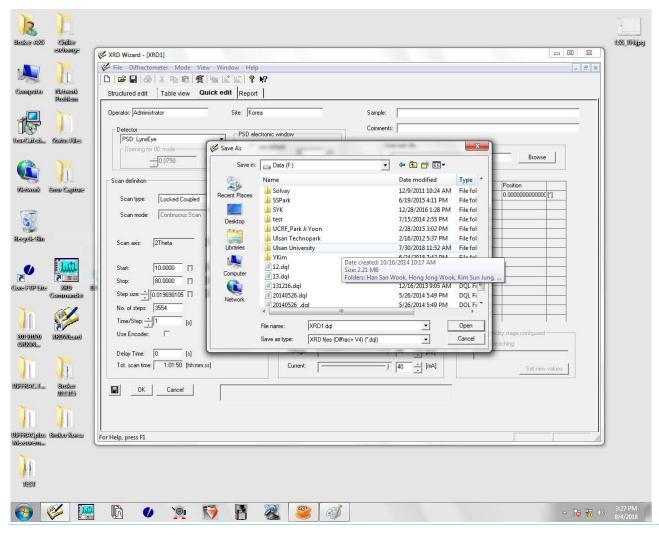


Save location is,

Computer


- > F Drive
- > Lab name folder
- > Requester name folder
- > Measurement date folder





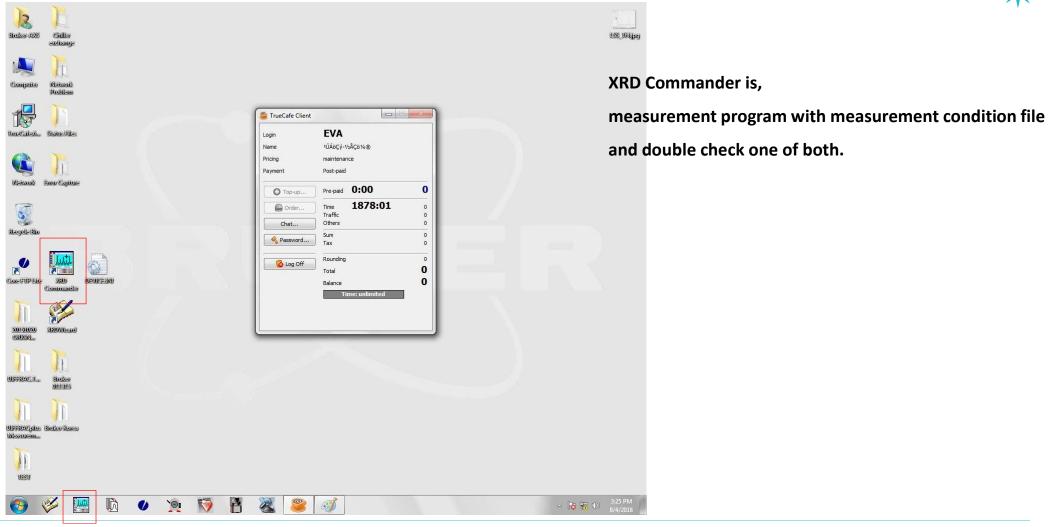




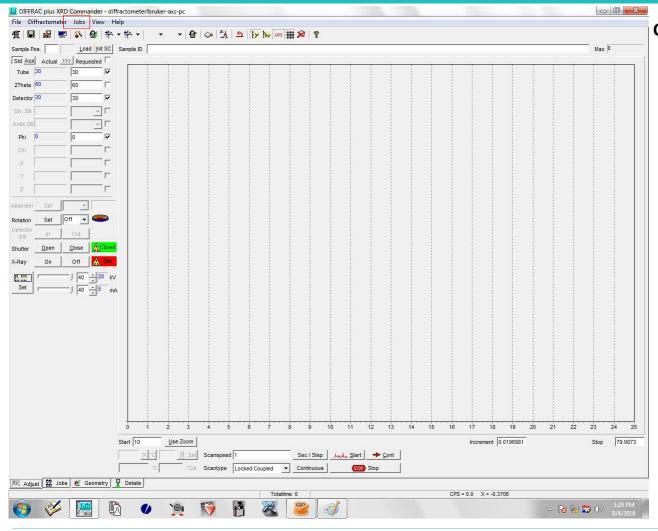

Click 'Jobs' button in upper TAB.




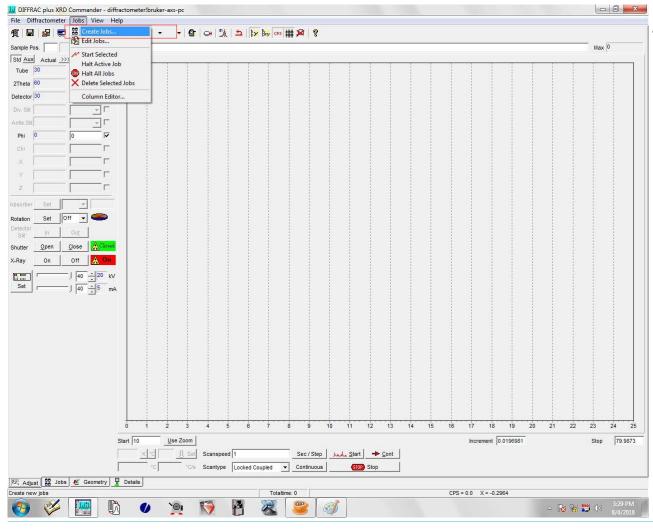

And then, click 'Create Jobs'.






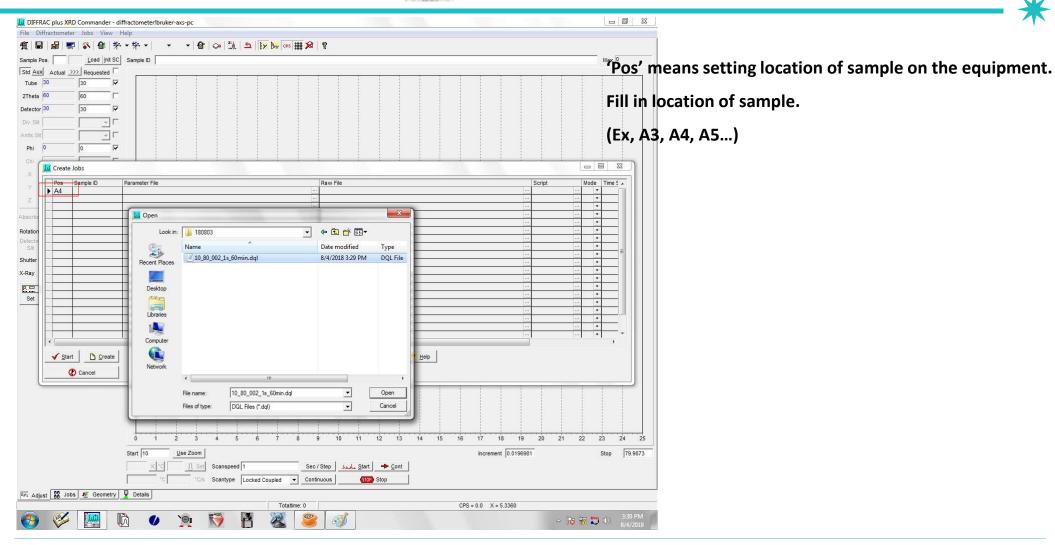





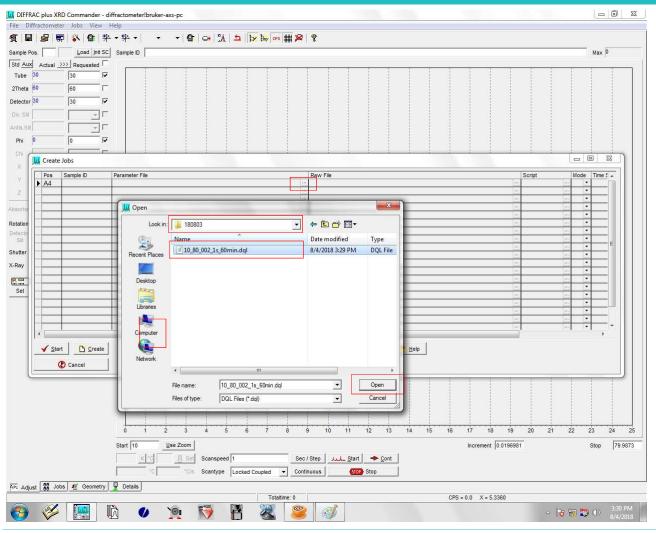

Parameter File means measurement condition file

- Extension is '.dql'

Click shortcut icon '[...]'

Click 'Computer' and go to saved location of measurement condition file.


- F Drive > Lab name folder > Requester folder

Click name of measurement condition file in

measurement date folder and then open.






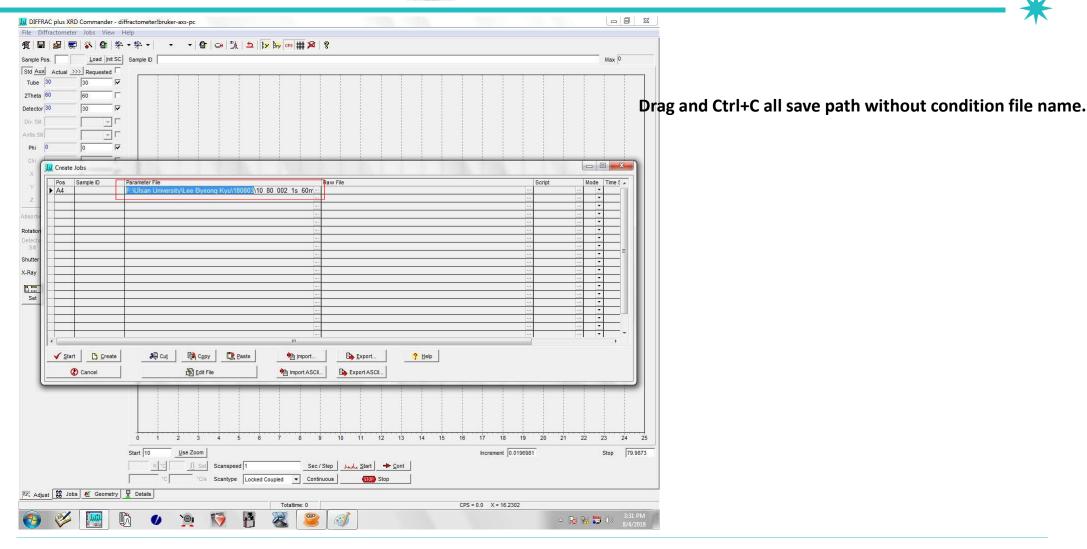






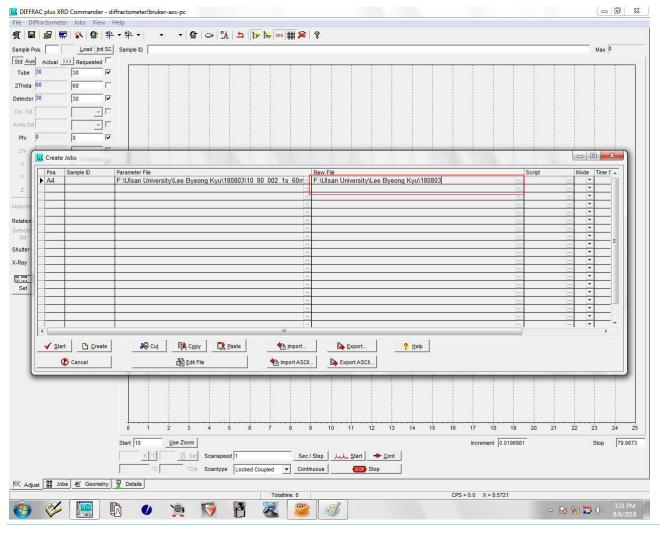

Ctrl+V in 'Raw File' space.





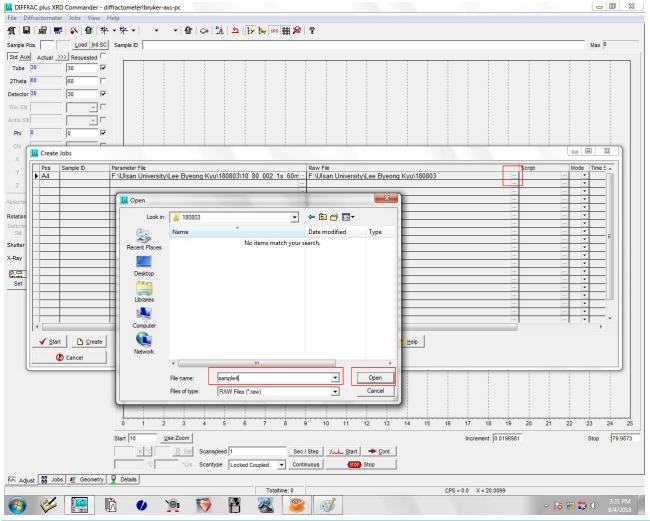


Click button Browse '[...]' of Raw File and then,
Write sample name that you want to save.

Click 'Open'





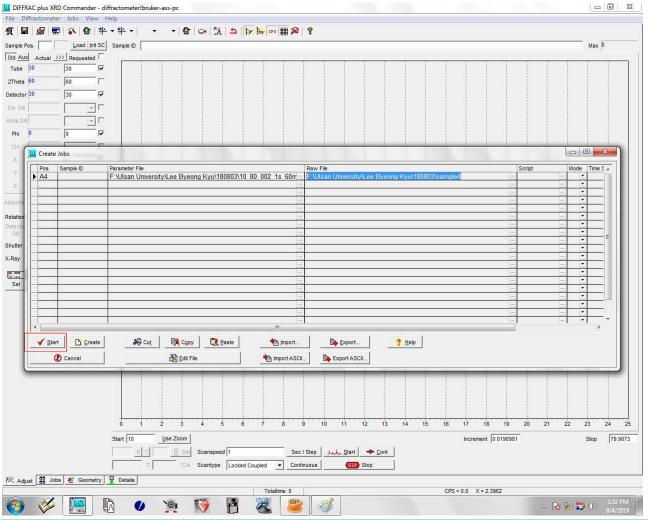

Click 'Start' button and then,

You should check sample moves to **Sample Lift** well.


★When Signal is shown at program,

It does not matter if you leave your seat.



Measurement Complete




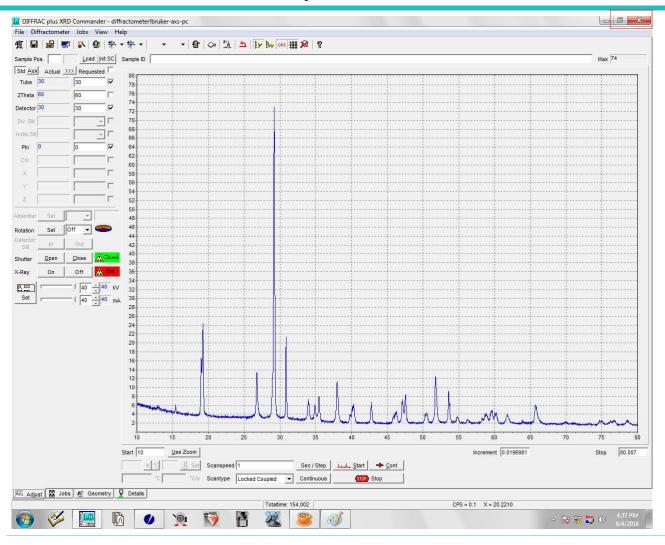

If 'Busy' LED button of Status Light is off, It means measurement complete.

Finish Commander program.




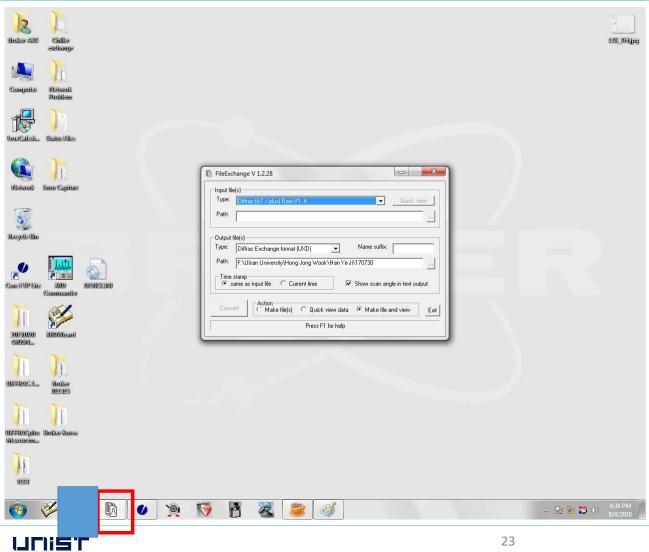

Double click 'File Exchanger' program.

23




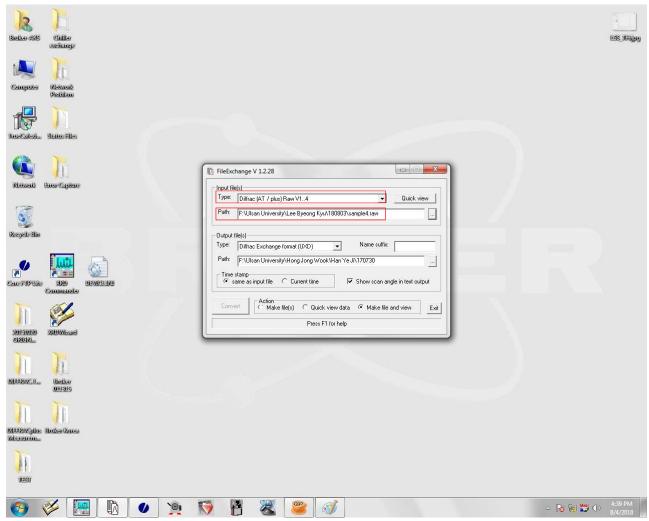

Input File Type:

Choose 'Diffrac (AT/Plus)Raw.V1.4' of them.



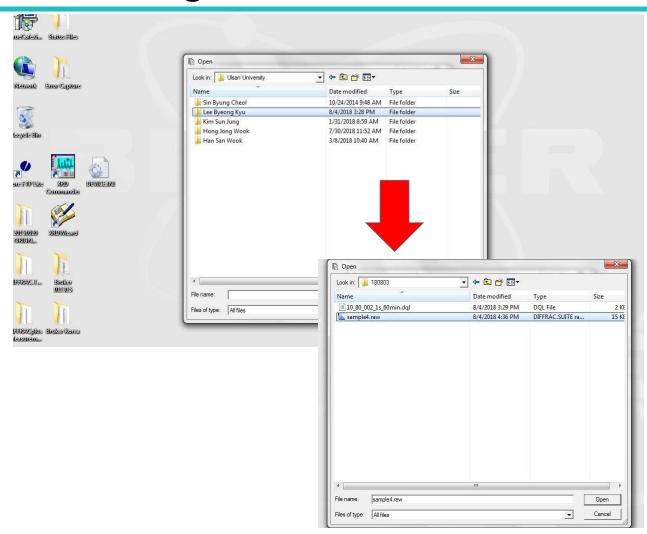


Bring the saved file in Path Browser '[...]'

- > F Drive (1)
- > Lab name folder (2)
- > Requester name folder (3)
- > Measurement date (4)
- > Sample name (5)

And then, open.





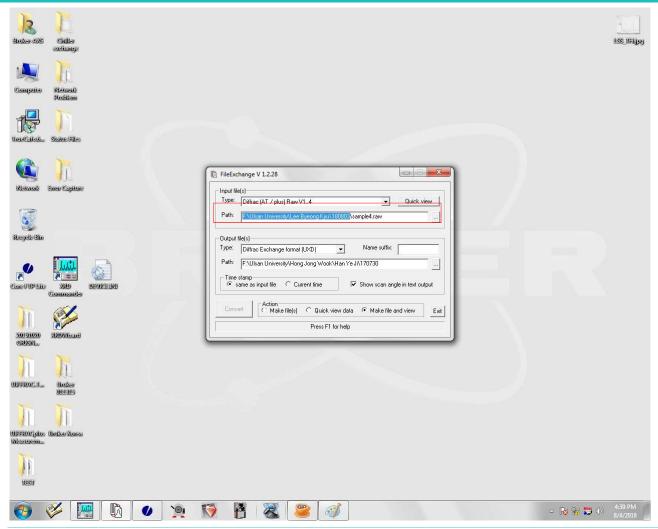


Drag and Crtl+C all Path name without sample name file.

(Location:

F:\Lab name > Requester name > Date)



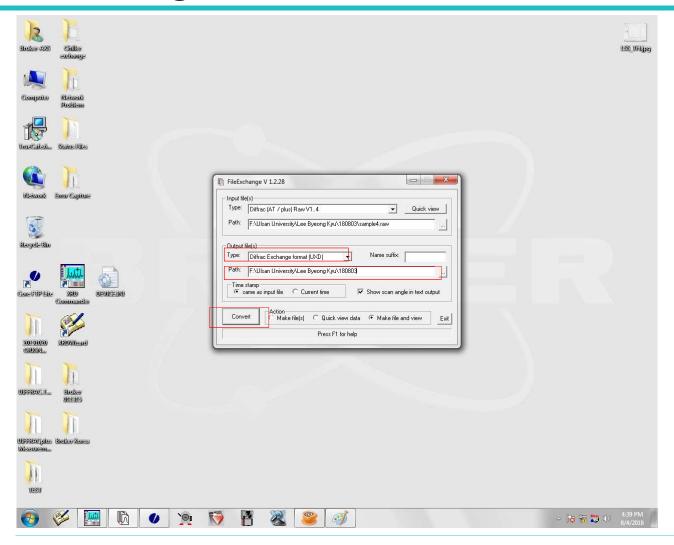


Output File Type:

Choose 'Diffrac Exchange Format (UXD)'.

Output File Path → Ctrl+V

Click 'Convert' button.



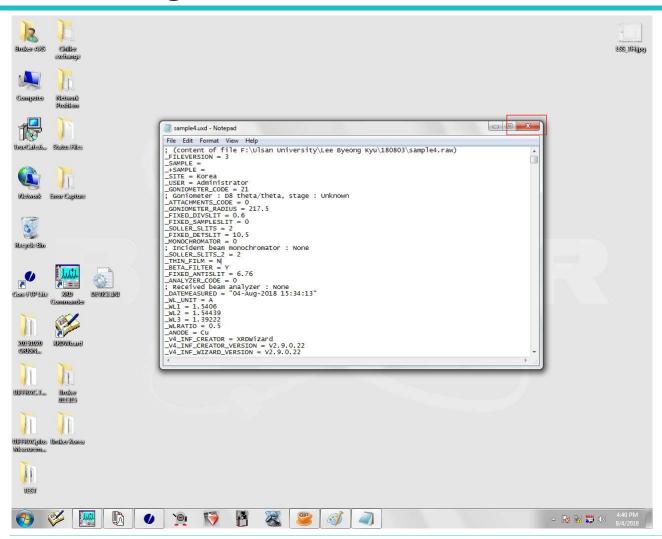


And then, it shows converted UXD files.

Click 'x' all UXD files.

File exchange complete!






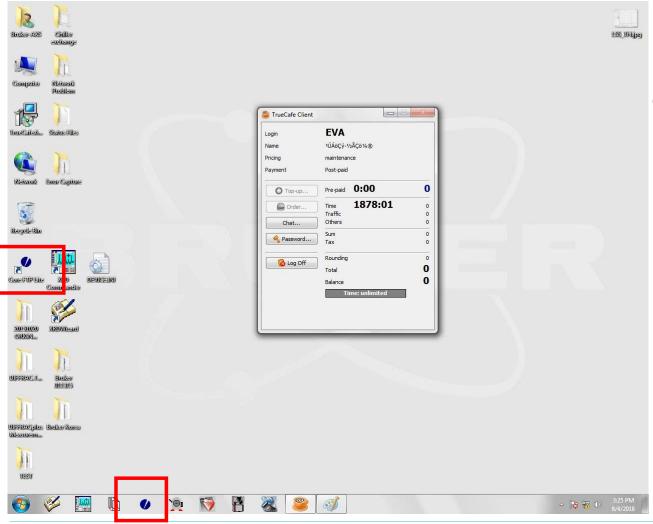

Core FTP is downloadable program without using USB.

Double click one of both.



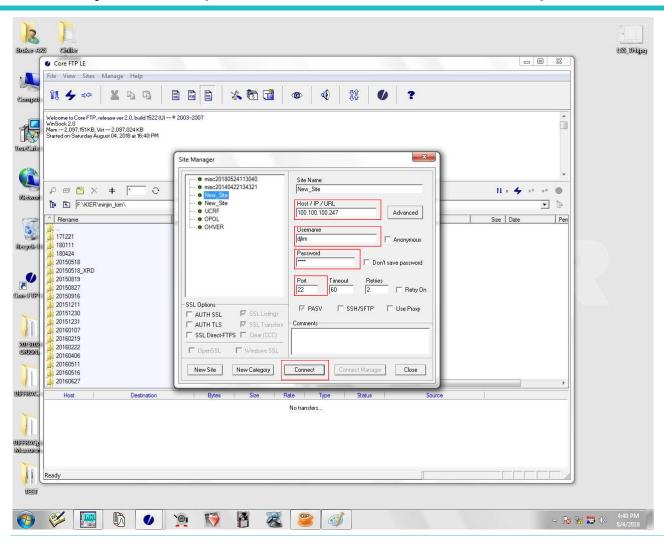

IP: 100.100.100.247,

Username: djlim,


Password: 0254,

Port: 22


And then, Click 'Connect'





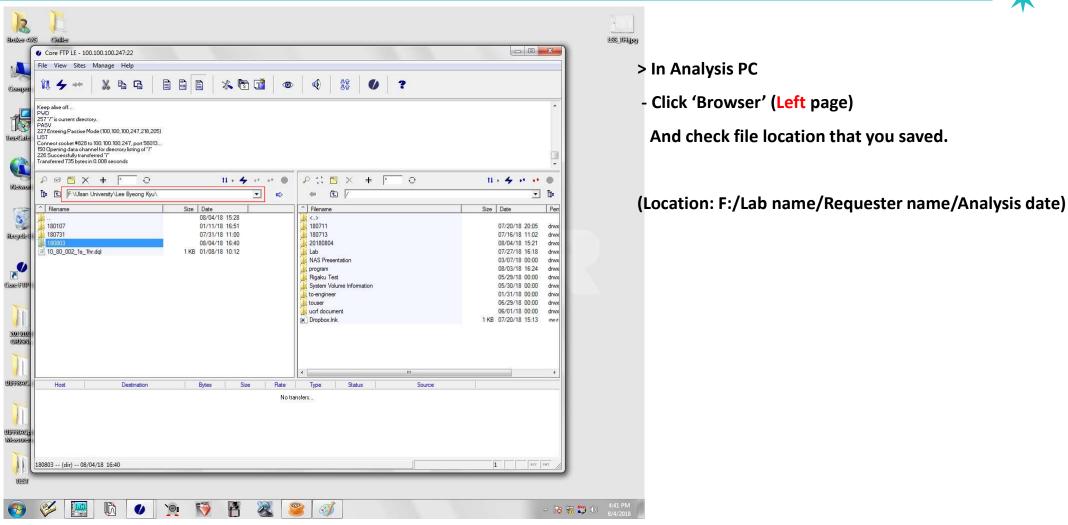




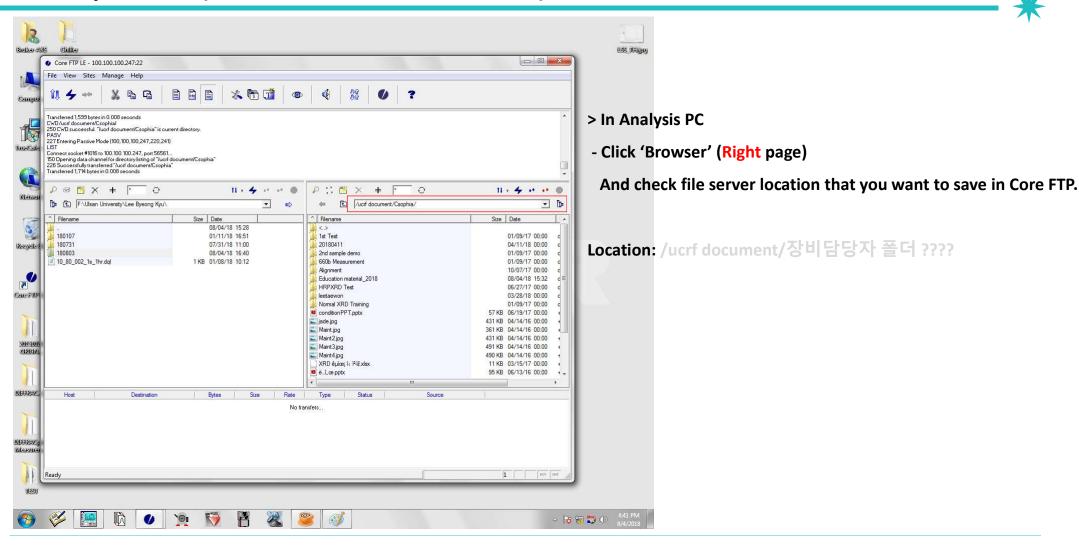






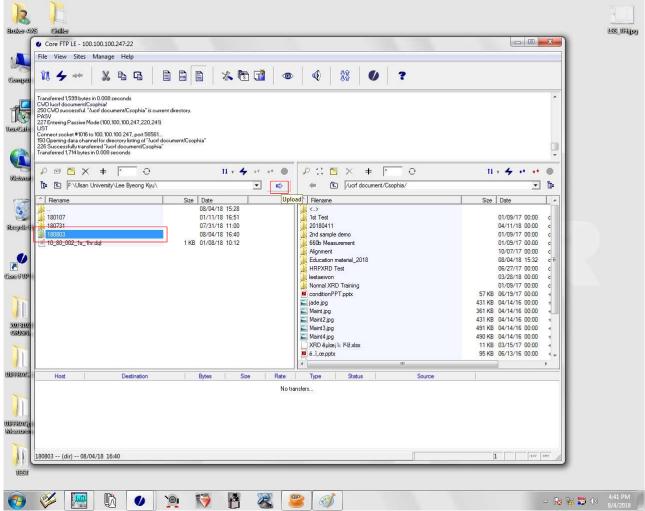

And then, Click file you want to upload in Analysis PC, Click the 'Upload' button.





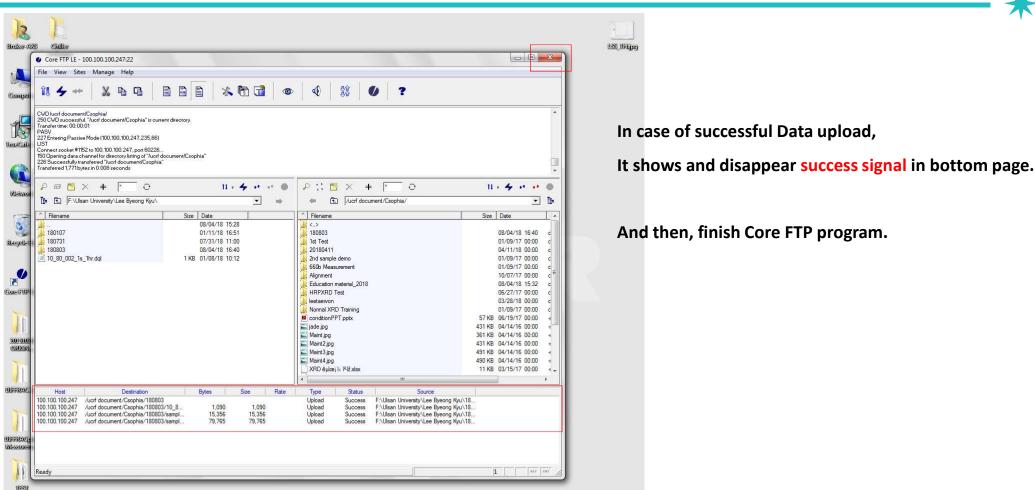

△ 🍪 📆 🥌 (b) 4:42 PM



0







> In PC for INPUT RESULT, (center table)

Double click 'Core FTP LE' in desktop
For Data Download.




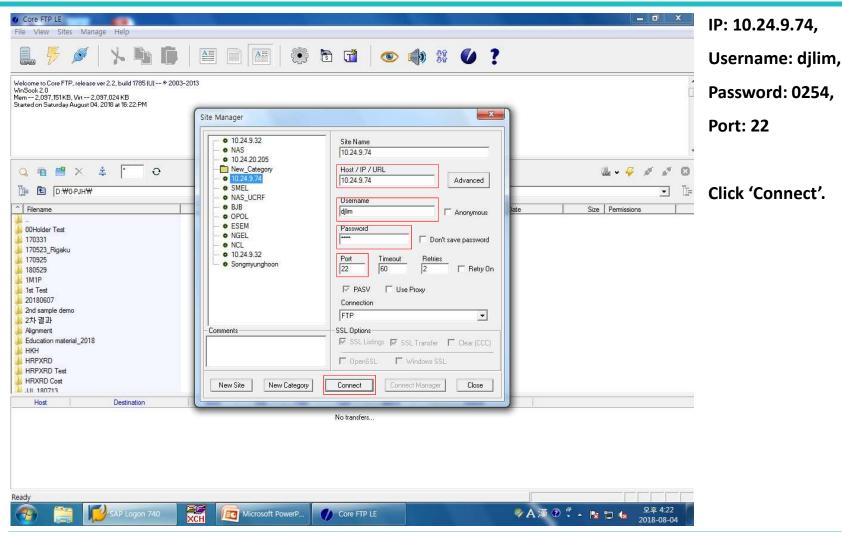



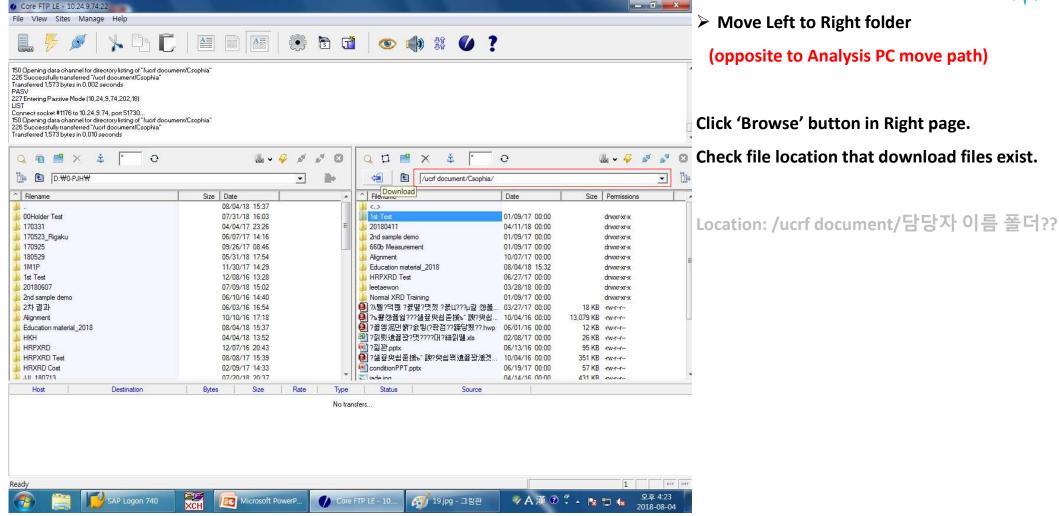



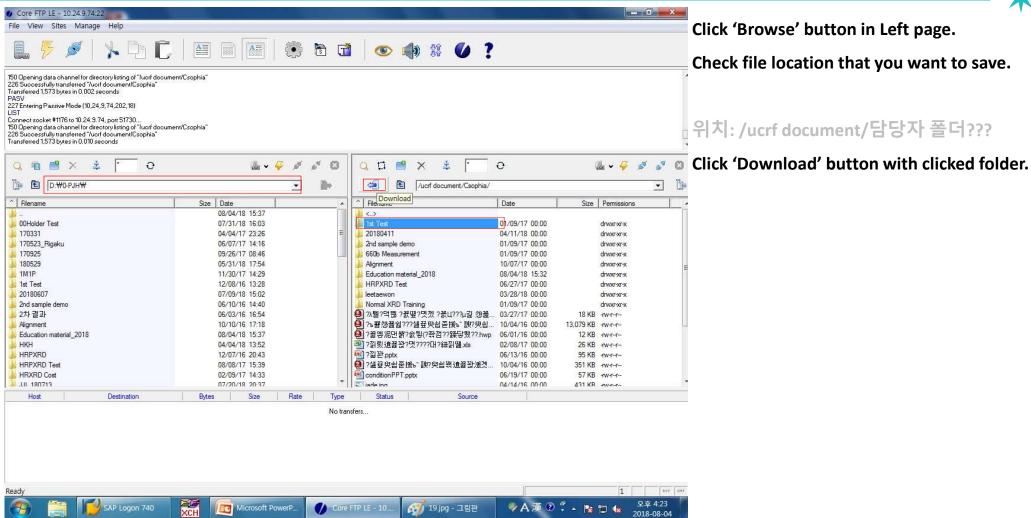

Sample Recovery







> PRINCIPLE:

The recovery of samples should be done within a week after measurement.

If not recovery, manager discards it.





*XRD has X-ray that is harmful so it has strict Safety Rule.

If you do Door Open or Close without pressing 'Door Open' button, machine is damaged due to force quit of X-ray.

Be careful to do Door Open & Close!